

**TITLE: Trulink Clip
Dis-Assembly**

1.0 Process of Dis-Assembly

1.1 Hold Trulink assembly with finger and thumb as illustrated in photo Fig.1.

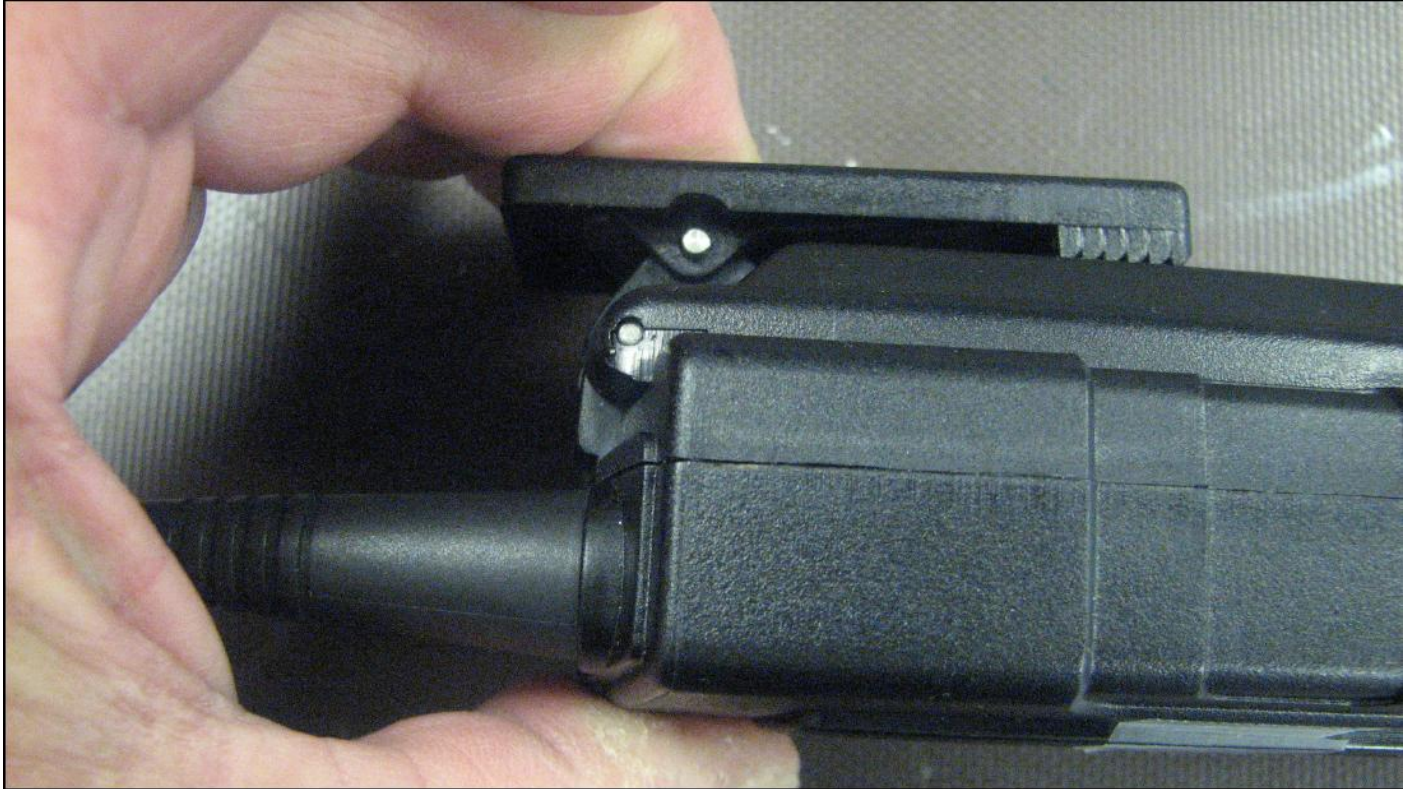


Fig. 1

1.2 Using a 0.090 inch dia pin or thick paper clip, push in on the pin securing the clip to the Trulink assembly until the pin becomes exposed on the opposite side.

1.3 Grab the pin with a small nose pliers and remove the pin completely separating the clip from the Trulink assembly.